

VEHICLE LEFT TURN BULB

VEHICLE RIGHT TURN BULB

OEM WIRES


(+) (-)

BROWN TO MSC09991 RELAYS

OEM WIRES

INTO MAIN BOSS HARNESS

1. Connect the VIOLET bullet connector to the vehicles LEFT TURN (-) wire.
2. Connect the PINK bullet connector to the vehicles RIGHT TURN (-) wire.
3. Splice the MSC09991 Turn Signal Relay Kit into the BOSS harness per instructions.
4. Cut the 3/8" Ring Terminal off the BROWN wire from the MSC09991 Turn Signal Relay Kit and splice the BROWN to the OEM (+) TURN wire.
5. Connect the RED wire with the 3/8" Ring Terminal to battery pos (+).
6. Test.

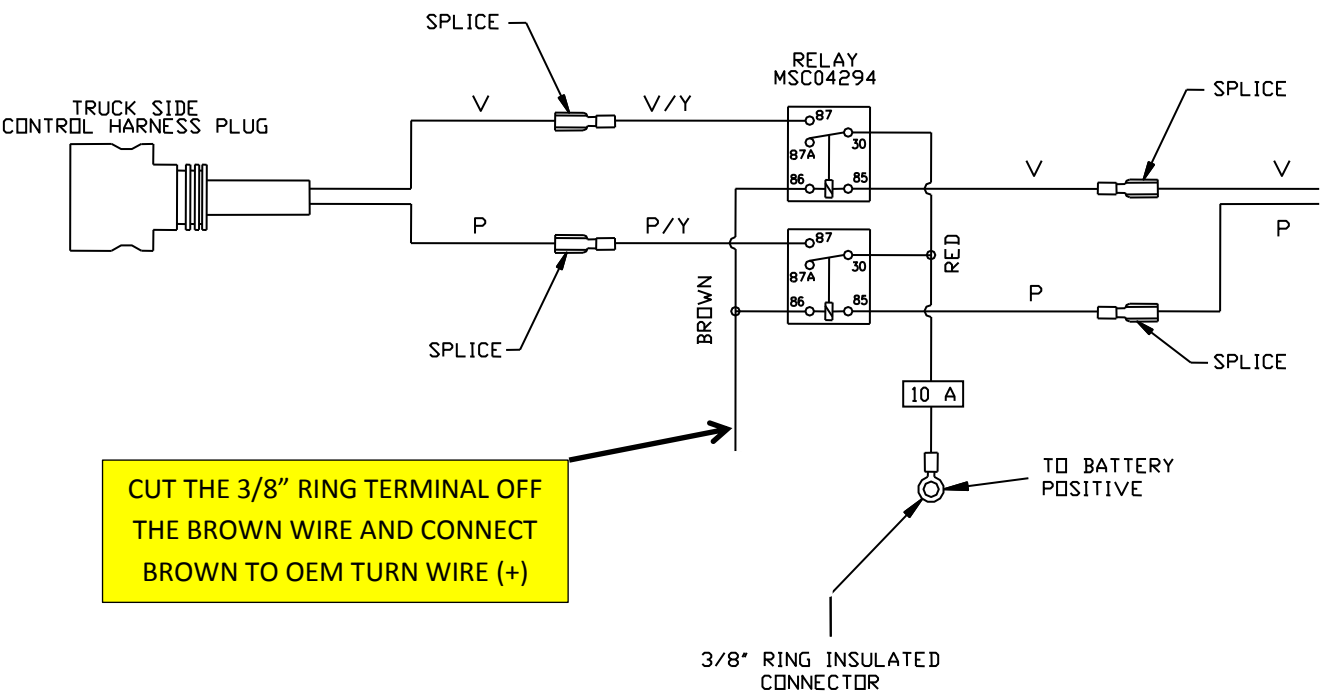

CUT THE 3/8" RING TERMINAL OFF THE BROWN WIRE AND CONNECT BROWN TO OEM TURN WIRE (+)

MSC0991 TURN SIGNAL RELAY KIT